


AT316

使用説明書

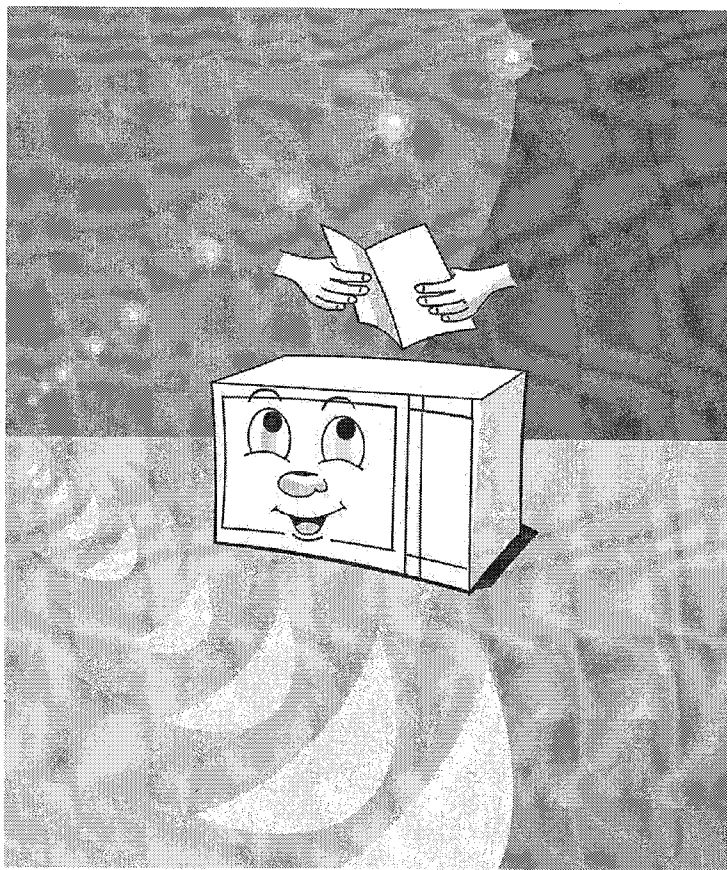


Whirlpool

目錄

	頁碼
注意事項	3
環保錦囊	3
微波爐全視圖	3
安裝指引	4
安全注意事項	5
配件	7
啟動保護/兒童安全鎖	8
如何暫停或終止烹調程序	8
如何使用計時器及自選時鐘顯示	9
如何使用微波烹調及翻熱食物	10
如何使用極速解凍功能	11
如何使用燒烤功能	12
如何使用燒烤及微波功能	13
如何使用脆焗功能	14
第六感功能	15
如何使用個人選擇功能	15
如何使用第六感翻熱功能	16
如何使用第六感飲品翻熱功能	17
如何使用第六感脆焗功能	18
如何使用第六感蒸煮功能	19
維修保養及清潔	20
問題解決指南	21
加熱數據測試	21

注意事項


多謝購買惠而浦產品！

本產品質料上乘，外形美觀，功能卓越，我們對各種細節均設想周到，使您生活得更舒適寫意。

為了使微波爐持久耐用，並將出現故障的機會減至最低，我們特別為閣下提供本使用說明書，當中包括正確的使用及維修方法等重要資料。



請將使用說明書及快速使用指南放置在安全的地方，以供將來參考。

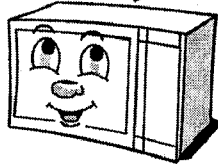

環保錦囊

包裝


用來盛載本微波爐的紙盒印有環保標籤，可以完全循環再造。棄置有關的包裝材料時，請遵循本地的廢物棄置條例。請把可能會引致危險的包裝材料（如膠袋、聚苯乙烯等）放置在小孩接觸不到的地方。



電器

本產品由可循環再造的物料製造，如日後需要棄置本產品，請遵循本地的廢物棄置條例。棄置前請切斷電源線，使本產品不能與電源連接。


微波爐全視圖

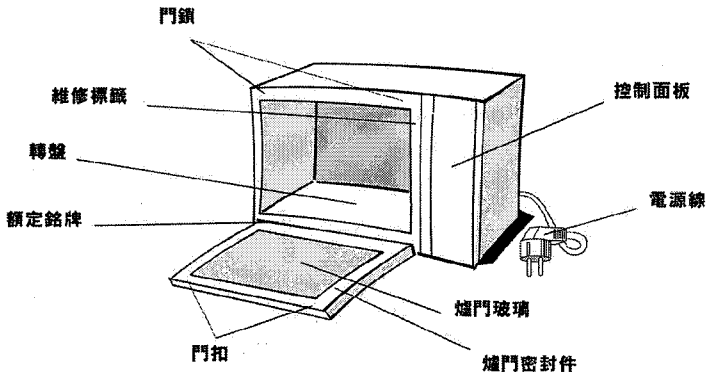

接駁電線之前

請檢查額定銘牌所標註的電壓是否與家居的相符，然後按照適當的方法接線。

將微波爐放置在平坦及穩固的地方，此處必須足以承托爐具連食物器皿的重量。附有控制板的一邊比較重，放置時必須小心。

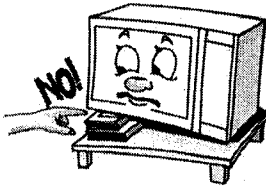

請將微波爐遠離熱源放置。輸入微波爐的冷空氣，必須低於 35℃。為確保通風良好，微波爐頂部必須留有 15 厘米的空間。請確保微波爐放置穩固，而且底部也應留有空間，以便通風。本微波爐可以在 +5℃ 至 +35℃ 的室溫下使用。

必須確定爐具並無損壞。可查看爐門關上時，是否緊貼門框，以及內門的封邊是否完整無缺。將爐具內配件拆除，然後用柔軟的濕布清潔爐腔內部。


電源線、插頭如有損壞，或爐具不能正常操作，或受到損壞或翻跌，則切勿使用微波爐。切勿將電源線或插頭浸入水中，並避免接觸灼熱的表面，否則會引致觸電、火災或其他意外。

連接後

當微波爐首次接駁至電源或者停電後，當電力剛剛恢復時，顯示屏會空白一片。如有需要，本微波爐可顯示 24 小時制的數碼時鐘。如果時鐘功能沒有編入時間，顯示屏仍會空白一片，直至設定烹調時間或計時器為止。

微波爐只有在爐門緊閉後才能操作。

如將微波爐放置在電視機、收音機或天線附近，可能會影響接收或引起干擾。

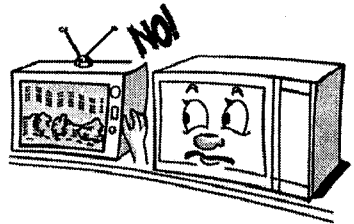

根據法例規定，本產品必須接駁地線，用戶如果不遵守這條規定，而導致任何人身、動物傷亡或財物損失，製造商概不負責。

警告！

本微波爐必須接駁地線！



安全注意事項

一般資料

本產品只供一般家居使用。

爐內未有食物時，切勿使用微波功能，否則可能會對爐具造成損壞。

微波爐頂上的排氣孔必須保持暢通。爐具抽氣或排氣受阻，均會對爐具造成損壞，以及影響烹煮效果。

假如你要學習使用的技巧，可把一杯清水置於爐內，讓清水將微波能量吸收，以免損壞爐具。

切勿將微波爐放置或在室外使用。爐具不應存放在廚房鋅盤或泳池附近，以及潮濕的地窖等地方。

切勿使用微波爐作存放物件之用。

切勿在微波爐內或其附近加熱或使用易燃物品。此等物品釋出的氣體，會引起火警或爆炸。

本爐具專為加熱食物或烹煮食物而設，並不適宜處理腐蝕性化學品或氣體，因此並不適合工業或實驗用途。

 
微波爐亦不宜用來烘乾衣物、紙張、香料、草藥、木製品、花朵、水果或其他易燃物品，以免發生火警。

必須經常留意爐內情況，尤其當使用紙製、塑膠或其他易燃物料製造的器皿時，更應如此。烹煮食物時，紙張可能會着火或燒焦，塑膠甚至會被熔解。

切勿將食物煮得過熱，以免發生火警。

如物品在微波爐內、外着火或冒煙，須保持爐門關閉及關閉微波爐電源，然後將電源插頭拔去，或切斷保險絲或斷路器的電源。

爐門打開時，切勿
挨靠爐門，以免發
生意外。



警告！

小孩只有在完全掌握正確使用方法的情況下，才能在沒有成人監督下，使用本微波爐。使用前必須確保小孩能安全地使用本產品，並明白錯誤使用所帶來的後果。

食物在放入微波爐前，應先除去紙袋或膠袋的金屬線。




若燒烤功能並不常用，食物殘粒及脂肪或會在燒烤元件之間積存，並有引致火警的危險。要減少此等危險的發生，請於每月最少使用燒烤功能一次，每次 10 分鐘，以清潔有關元件。

流質食物

用微波爐加熱的飲品或清水，即使煮得過熱，甚至超過沸點，也未必會出現沸騰的汽泡，而液體可能會突然溢出。為避免上述情況發生，請遵守下列各點：

1. 避免使用窄頸的直身容器。
2. 將流質食物放入爐內之前，先加以攪拌，並將匙羹留在容器內。
3. 流質食物加熱後，讓它逗留在爐內片刻，再加以攪拌，才將容器小心拿出。

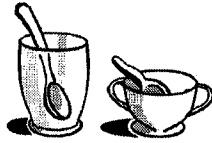

容器

微波爐並不適宜加熱密封容器內的食物或液體，因為當開啟容器時，上升的氣壓，可能導致損壞或引起爆炸。



雞蛋

切勿使用微波爐烹煮或翻熱原隻雞蛋，無論連殼或不連殼都不可以，因為它們可能會爆開。



油炸

切勿使用微波爐來油炸食物，因為油的溫度會不受控制。



小心

必須參考微波爐烹飪食譜的指引，尤其當烹煮或翻熱含有酒精的食物。加熱奶樽或嬰兒瓶內的食物或液體後，在喂食之前須將食物加以攪拌及測試溫度，以確保熱力分佈均勻，避免燙傷或灼傷嬰兒。



確保加熱前樽蓋和奶嘴已取出！

小心燙手

觸碰容器、爐具部件及烤鍋前，切記使用隔熱墊或隔熱手套，以免燙傷。

配件

轉盤托架

在玻璃轉盤下，**使用轉盤托架**。

切勿在轉盤托架上直接放置其他器皿。

 
* 把轉盤托架裝入微波爐。



玻璃轉盤

可使用**玻璃轉盤**配合各種烹調方法。它能收集食物屑及餘汁，避免沾污微波爐內壁。

* 在轉盤托架上，放置玻璃轉盤。



脆焗盤手柄

請使用附送的專用**脆焗盤手柄**，取出微波爐內燙熱的脆焗盤。



脆焗盤

將食物直接放在**脆焗盤**上。使用脆焗盤時，應使用玻璃轉盤作為支撐。



切勿將其他器皿放在脆焗盤上，因為它會快速變熱，並對器皿造成損毀。



在使用前，可以預熱**脆焗盤**(最多3分鐘)。預熱脆焗盤時，請使用脆焗功能。

燒烤架

在使用燒烤功能時，請將食物放在**燒烤架**上，它可令食物表面快速變成金黃色。



膠蓋

只有使用微波烹調及翻熱食物時，才用**膠蓋**蓋著食物，它能防止食物濺出，並保持食物內的水份，以及減少所需的時間。



進行雙層翻熱時，**請使用膠蓋**。

切勿在燒烤、脆焗或熱風對流功能時使用膠蓋，這樣會令它熔解。

蒸鍋

當烹調魚類、蔬菜及馬鈴薯等食物，**請使用蒸鍋及蒸架**。



當烹調米飯、麵條及白豆等食物時，**請獨立使用蒸鍋**，而不需使用蒸架。

應將蒸鍋置放在玻璃轉盤上。

切勿在操作**燒烤**或**脆焗**功能時使用蒸鍋，否則，塑膠蒸鍋會被熔解。

一般配件

市面上出售的配件種類繁多，在購買前請弄清楚是否適合微波爐使用。

把食物及配件放進微波爐時，必須確保它們沒有直接觸及爐壁，當使用**金屬配件**或帶有金屬部份的配件時，尤應加倍小心。

在微波爐運作期間，**如果配件的金屬部份**誤觸微波爐內壁，微波爐或會發出火花，並可能會令微波爐損壞。

使用微波爐前，**請確保轉盤**可自由轉動。

煮食前，**請確保使用的器皿**適合微波爐使用，並可讓微波通過。

在取出微波爐內燙熱的器皿時，**請使用隔熱手套**。


啟動保護 / 兒童安全鎖

本自動安全鎖功能，會在爐具回復“備用”狀態後一分鐘啟動。（當時鐘顯示24小時時間或時鐘未有設定而顯示窗空白時，爐具便處於“備用”狀態。）

安全鎖必須在爐門開啟及關閉後（例如放食物進焗爐中）才會鬆開。

如果你沒有放入食物便操作微波爐，顯示窗將顯示“door”（爐門）的字樣。

如何暫停或終止烹調程序

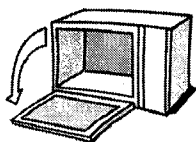

暫停烹煮程序

如果你想查看食物的烹調情況、攪拌或翻轉食物，只要打開爐門，烹煮程序便會暫時停止運作。而有關設定，在爐門被開啟時，仍會保留 10 分鐘。



如果你不想烹調過程繼續進行：

請取出食物，關上爐門，然後按「停止」掣。



烹調過程結束後，微波爐會每分鐘發出一次「呔」聲，為時 10 分鐘。按停止掣或開啟爐門，取消響鬧信號。

注意：如果完成烹煮後將門開啟，然後關上，則爐具只會保持設定值 60 秒。




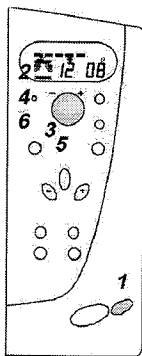

 
 
 
 
重新啟動烹煮程序：

關上爐門及按「啟動」掣一次，烹煮過程會由暫停階段繼續運作。

除非閣下正在使用自動功能，否則，若按「啟動」掣兩次，烹煮時間會增加 30 秒。

如何使用計時器及自選時鐘顯示

設定時鐘時，應把爐門開啟，這樣便會有 10 分鐘的時間設定時鐘。若爐門已關上，則每一步驟必須在 60 秒內完成。

	使用方法	爐具反應	
	1. 按「停止」掣。	* 兩點亮起。	
	2. 持續按下「時鐘」掣3秒。		* 左面數字（小時）閃動。 * 必聲響起，表示微波爐已在設定模式。
	3. 轉動「調節」旋鈕以設定小時。		* 選定的小時仍然閃動。
	4. 再按「時鐘」掣。		* 右面兩個數字（分鐘）閃動。
	5. 轉動「調節」旋鈕以設定分鐘。		* 選定的分鐘仍然閃動。
	6. 再按「時鐘」掣。		* 時鐘已被設定及會正常運作。

如果要除去顯示屏的時鐘功能，只需再持續按下「時鐘」掣3秒，然後按「停止」掣便可。

如需重新設定時鐘，請重覆上述程序。

計時器

計時器是完全獨立於其它功能，無論微波爐是否正在煮食，閣下隨時都可使用計時器。


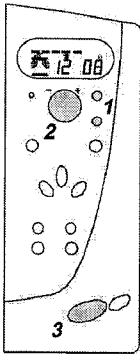
 
 
 

當按「時鐘」掣，顯示屏便會顯示計時器的剩餘時間，並會在持續出現3秒後，(如閣下正在使用微波爐煮食) 顯示烹煮時間。

- 🕒 1. 按「時鐘」掣一次。
- ↻ 2. 轉動「調節」旋鈕。
- ⬇ 3. 按「啟動」掣。

當計時器在其它功能的背景內運作，而閣下需要停止計時器時，請先按「時鐘」掣，將計時器切換至前景位置，然後轉動「調節」旋鈕至0，或按「停止」掣一次。

如何使用微波烹調及翻熱食物

本功能適合一般煮食、翻熱或快速翻熱 (極速啟動 Jet-Start 掣) 食物，如清湯、咖啡、茶或其他含水量高的食物。


	使用方法	爐具反應
	1. 按「火力」掣以設定火力。	 * 顯示火力。
	2. 轉動「調節」旋鈕以設定時間。	 * 顯示時間。
	3. 按「啟動」掣。	 * 微波運作符號閃爍。 * 顯示倒數烹煮時間。
使用此功能時，切勿使用下列配件。		
		

烹煮過程開始後：

可按下「啟動」掣延長烹煮時間，每按一次，烹煮時間會延長 30 秒，轉動「調節」旋鈕時，也可增加或減少烹煮時間。此外，你可按「火力」掣來更改火力。按一下會顯示目前的火力，重覆按「火力」掣，便可更改火力級數。

如何使用極速解凍功能


本功能只可用作解凍用途，只有為下列5種冷藏食物類型極速解凍時，才可使用極速解凍功能。

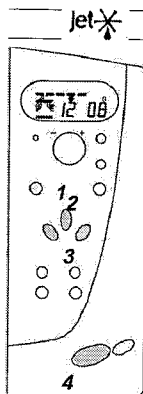


使用方法

1. 按「極速解凍」掣。
2. 連續按下「極速解凍」掣，選擇所需的食物種類。
3. 按「重量」掣，設定需要解凍的食物重量。
4. 按「啟動」掣。

 
爐具反應



- * 顯示屏現在顯示以克(gr.)計的重量，並顯示五類食物的第一類。

 

- * 顯示選擇的食物種類。

 


- * 顯示輸入的重量。



- * 解凍過程開始。
- * 微波運作符號閃爍。
- * 顯示倒數的解凍時間。

 使用此功能時，切勿使用下列配件。



5. 在解凍過程途中，微波爐會停下，並提示你 "TURN FOOD" 「翻轉食物」。

Turn
Food
Pre-Start

- 切勿使用「停止」掣。
- 打開爐門並翻轉食物。
- 關上爐門，並按「極速解凍」掣重新啟動微波爐。

注意：如果食物沒有被翻轉，微波爐會在2分鐘後繼續操作，但需要較長的時間才能解凍。

微波爐必須知道食物的類型及淨重：


1. 肉類(100 克 - 2 千克)
2. 家禽(100 克 - 3 千克)
3. 魚肉(100 克 - 2 千克)
4. 蔬菜(100 克 - 2 千克)
5. 麵包(100 克 - 2 千克)

如果食物的重量與建議的重量有不同：

請依照 "如何使用微波烹調及翻熱食物" 一節的指示，然後選擇 160 瓦火力解凍。軟化雪糕或牛油時，應把火力調校至 90 瓦。

如何使用燒烤功能

此功能可以迅速將食物的表面燒烤成金黃色。

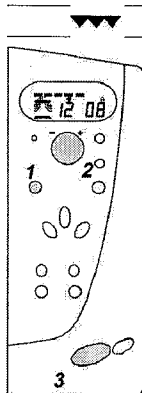

使用方法

1. 按「燒烤」掣。
2. 轉動「調節」旋鈕以設定時間。
3. 按「啟動」掣。

爐具反應



- * 顯示5秒鐘。
- * 燒烤符號亮起。



- * 顯示輸入的時間。



- * 燒烤符號閃爍。
- * 顯示倒數的烹調時間。

使用此功能時，切勿使用下列配件。



使用燒烤功能時，切勿將爐門開啟太久，否則會使溫度下降。

注意：

在烹調期間，按下「燒烤」掣可以令燒烤元件啟動及停止，燒烤元件停止後，計時器會繼續倒數。







⚠ 重要！

燒烤前，請確保使用的是耐熱器皿，並能在微波爐中安全使用。

燒烤時，切勿使用塑膠器皿，否則器皿會熔解。紙製或木製器皿，亦不適合在微波爐使用。

如何使用燒烤及微波功能

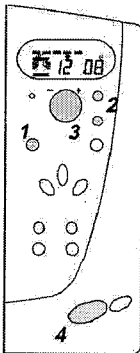本功能適用於烹調脆皮食物、寬麵條、家禽及焗薯。

  



勿	使用方法	爐具反應	
	1. 按「燒烤」掣。		<ul style="list-style-type: none"> * 顯示5 秒鐘。 * 燒烤符號亮起。
	2. 按「火力」掣以設定火力級數。		<ul style="list-style-type: none"> * 微波符號亮起。 * 顯示設定火力。
	3. 旋轉「調節」旋鈕以設定時間。		<ul style="list-style-type: none"> * 顯示時間。
	4. 按「啟動」掣。		<ul style="list-style-type: none"> * 微波爐符號閃爍。 * 燒烤符號閃爍。 * 顯示倒數烹調時間。
使用此功能時，切勿使用下列配件。			
			

在操作期間你可以按「燒烤」掣，開／關燒烤元件。使用燒烤功能時，可供使用的最大微波火力已被原廠的預設數值所限制。

將微波火力降至0 瓦，可以關掉微波功能。當調校到0 瓦時，微波爐將切換至燒烤模式。

如何使用脆焗功能

 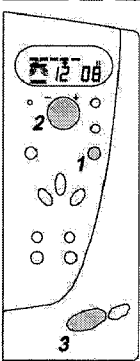使用此功能可以翻熱和脆焗薄餅及其他麵粉製食品，更可以香煎煙肉、蛋類、香腸和漢堡扒等。

使用方法	爐具反應
 <ol style="list-style-type: none"> 1. 按「脆焗」掣。 	 <ul style="list-style-type: none"> * 顯示5秒鐘。 * 燒烤符號亮起。 * 脆焗符號亮起。 * 微波符號亮起。
<ol style="list-style-type: none"> 2. 旋轉「調節」旋鈕以設定時間。 	 <ul style="list-style-type: none"> * 顯示輸入的時間。
<ol style="list-style-type: none"> 3. 按「啟動」掣。 	 <ul style="list-style-type: none"> * 微波符號閃爍。 * 燒烤符號閃爍。 * 顯示倒數烹調時間。

使用此功能時，切勿使用下列配件。



微波爐自動採用微波及燒烤功能來加熱脆焗盤。因此脆焗盤能迅速達到運作溫度，並開始脆焗食品，將其燒烤成金黃色。

使用脆焗功能時，無法改變或切換火力或燒烤開／關功能。

⚠ 重要！

請確保脆焗盤正確地放在玻璃轉盤的中間位置。
 使用此功能時，微波爐及脆焗盤的溫度會升得極高。
 切勿將高溫的脆焗盤放在容易受熱的地方。
 切勿觸摸燒烤元件下的爐頂部份。
 從微波爐取出高溫的脆焗盤時，請使用微波爐手套或附送的專用脆焗盤手柄。



如何使用第六感功能

運作時，第六感功能會首先檢查食物的狀況，然後會作出相應的監測及調節，以達至最佳效果。

開始時，微波爐會顯示SENSE的字樣，直至微波爐能計算出所需最長的烹煮時間，並會顯示倒數的烹煮時間。

最長烹煮時間，需要視乎食物的數量及類別；在第六感功能運作時，最長烹煮時間將以倒數形式顯示。倒數時，時間或會突然縮短數分鐘，這是基於微波爐正在調校合適的烹煮時間，屬正常現象。

所有含水份的食物，在解凍或翻熱時，水份都會被蒸發。為確保第六感翻熱功能可以正確運作，烹煮時，所有食物應先以隨本微波爐附送的膠蓋蓋好。

如購買任何急凍食品，在使用第六感功能前，應先在食物包裝上割2至3刀，又或將所有包裝移除，並將食物以隨本微波爐附送的膠蓋蓋好。

請注意，數分鐘的停放時間，能改善烹煮效果。

如何使用個人選擇功能


當使用第六感功能時（蒸煮功能除外），透過個人選擇功能，閣下可根據個人喜好，控制烹煮效果。本功能讓閣下隨意設定較高或較低的烹煮溫度。

當按「第六感功能」掣時，閣下便已選擇了標準設定，而有關設定通常都能達至最佳的烹煮效果。或許所翻熱的食物，熱度並不適合於即時食用，閣下只需在下次使用第六感功能前，作出相關的調校便可。

+ 2
-- 2

使用方法

爐具反應

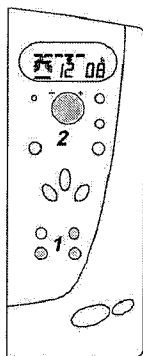

1. 按「第六感功能」掣一次。

2. 轉動「調節」旋鈕設定個人選擇。



* 顯示所選擇的功能(SENSE)。



* +延長停止時間。



* -縮減停止時間。

注意：

只可在微波爐運作首20秒內設定或調校個人選擇功能。


如何使用第六感翻熱功能

本功能適用於翻熱冷凍或急凍的預製食物。



使用方法


1. 按「第六感翻熱」掣一次。

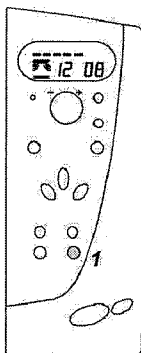

爐具反應



 - * 顯示SENSE。
- * 微波符號閃動。



- * 翻熱符號亮起。
- * 顯示翻熱時間過後，便會開始倒數翻熱時間。

使用此功能時，切勿使用以下配件。



透過個人選擇功能，第六感翻熱功能依然可以完全自動運作或可因應個人需要作出調校。
+ 2
-- 2

當顯示SENSE字樣後，不應再對微波爐程式作出任何設定或調校。

當顯示時間，閣下便可以對微波爐程式作出設定或調校。


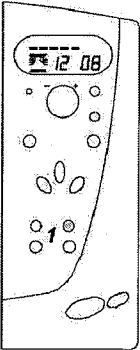




在使用本功能時，請務必使用隨本微波爐附送的膠蓋，但翻熱那些不需蓋好的湯類時則除外。如食物已包裝好，而不適合用上任何膠蓋，應先在食物包裝上割2至3刀，讓過量壓力能在翻熱過程中釋放。

當使用本功能時，食物淨重應在200至600克，如有關淨重與這個建議不相符，閣下應考慮使用手動功能以獲取最佳效果。

在使用本功能前，請確保微波爐是在室溫下使用，以便獲取最佳效果。

如何使用第六感飲品翻熱功能

本功能適用於翻熱清水、咖啡、茶類或牛奶等飲品。需要翻熱的飲品，應放在1或2個杯子內。

	使用方法	爐具反應
	1. 按「第六感飲品翻熱」掣一次。	 <ul style="list-style-type: none"> * 顯示 SENSE。 * 微波符號閃動。 * 翻熱符號亮起。
使用此功能時，切勿使用下列配件。		
  		

透過個人選擇功能，第六感翻熱功能依然可以完全自動運作或可因應個人需要作出調校。

+ 2
-- 2

微波爐正在操作時，不應再對微波爐程式作出任何設定或調校。

當使用本功能時，食物淨重應在**150至400克**，如有關淨重與這個建議不相符，閣下應考慮使用計時器及火力調控功能以獲取最佳效果。

重要！


當翻熱牛奶或朱古力時，**請務必**使用個人選擇減弱功能。
切勿翻熱任何含有酒精的飲品。

如何使用第六感脆焗功能

本功能適用於脆焗即食食物，尤其適合脆焗薯條及薄餅。
本功能讓閣下能迅速翻熱食物至食用溫度。

使用方法

1. 按「第六感脆焗」掣一次。

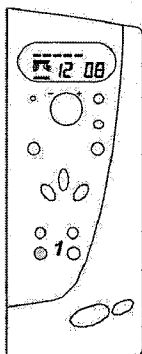

爐具反應



- * 顯示 SENSE。
- * 微波符號閃動。



- * 燒烤符號閃動。
- * 顯示翻熱時間過後，便會開始倒數翻熱時間。

在烹煮過程終結時，本微波爐會建議「繼續烹煮」時間，請先檢查食物(請翻轉薯條)，然後(如需要)按「啟動」掣以在建議時間內繼續烹煮。

使用此功能時，切勿使用下列配件。



透過個人選擇功能，第六感翻熱功能依然可以完全自動運作或可因應個人需要作出調校。

+ 2
-- 2

當顯示 SENSE 字樣後，不應再對微波爐程式作出任何設定或調校。

當顯示時間，閣下便可以對微波爐程式作出設定或調校。

使用本功能時，只可使用隨本微波爐附送的脆焗盤；市面上所供應的其它類型脆焗盤，配合本功能時，未必能帶出正確效果。

如果食物重量少於建議重量：

請使用手動「脆焗功能」以人手脆焗食物。有關脆焗經驗，讓閣下脆焗少量食物時，更易掌握正確的脆焗時間。

如果食物重量高於建議重量：

請先將食物分成2至數份，並分開脆焗。若未能分開食物，閣下便須使用手動「脆焗功能」以人手脆焗食物。由於食物份量較大，在脆焗時，必須攪拌及翻轉食物，請使用手動「脆焗功能」。



(250 - 600克)

* 薯條



(250 - 600克)





* 薄餅

重要！

切勿將任何容器或包裝材料，放到脆焗盤上。
只可將食物將放到脆焗盤上。

如何使用第六感蒸煮功能

本功能適用於快速煮熟並慢慢蒸煮食物。只需一個步驟，便可簡單把生的食物煮熟。

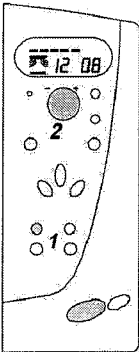  圖	使用方法	爐具反應
	1. 按「第六感脆蒸煮」掣一次。	 <ul style="list-style-type: none"> * 微波符號亮起。 * 翻熱符號亮起。 * 顯示BOIL
	2. 轉動「調節」旋鈕，直到顯示所需的蒸煮時間。	 <ul style="list-style-type: none"> * 顯示時間達3秒後，微波爐又會再次顯示BOIL。
	3. 按「啟動」掣。	 <ul style="list-style-type: none"> * 當到達沸騰溫度，便會顯示倒數蒸嫩時間。

使用此功能時，切勿使用下列配件。



閣下的微波爐配備自動煲煮及蒸煮功能。

本功能適用於食物如馬鈴薯或米：

本功能的運作分為2個步驟：

- * 步驟1，能迅速將食物烹煮至沸騰溫度。
- * 步驟2，本微波爐會自動調節至蒸煮溫度，以免過度煲煮食物。

使用本功能時，**請將食物蓋好**，並確保所用的器皿及膠蓋，全都適用於微波爐。如閣下未能為器皿找到合適的膠蓋，可用其它碟子當作膠蓋，但必須將碟子的底部，朝向器皿的內部。

切勿使用任何塑膠或金屬包裝物，包裹食物。

切勿在器皿內盛載超過半滿的食物。若閣下想煲煮大量食物，應選用體積較大的器皿，以確保所盛載的食物，未有超越器皿的一半體積。

⚠ 重要！

蒸鍋的設計只適用於與微波一同使用。

切勿在其他功能使用蒸鍋。

在其它功能使用蒸鍋，或會引致損毀。

啟動微波爐前，**請確保轉盤能自由轉動。**


應將蒸鍋置放在玻璃轉盤上。

維修保養及清潔

其實微波爐只要勤加清洗，便是最佳的護理方法。但是在清潔前，必須關掉電源。

切勿使用金屬墊刷清潔爐腔內壁，否則便會刮花表面。

應定期取出轉盤及轉盤托架，然後清潔爐腔底部，特別是曾倒翻食物後，更應如此。

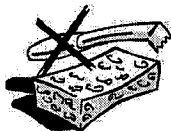

本爐具經精心設計，當轉盤安放妥當後，才可操作。當取出轉盤清潔時，切勿使用微波爐。

使用溫和的洗潔精、水和軟布，抹拭爐腔內壁、爐門的前、後部份及開門位置。

不要讓油漬及食物的渣滓，堆積在爐門的周圍。

如要清除頑固的污漬，可以將一杯清水放進爐內，然後煮上 2 至 3 分鐘，水蒸汽能夠溶解污垢。

如要清除爐具內的難聞氣味，可把一杯混有檸檬汁的清水，放在轉盤上，然後煮沸，便可消除爐腔內的難聞氣味。

燒烤元件不需要經常清潔，因為爐內的熱力會將污垢燒去，但爐腔頂部，則需定期清潔。清潔時，必須使用暖水、清潔劑及海綿。

若燒烤功能並不常用，每月都必須將有關功能運作 10 分鐘，以燒掉任何殘餘物，並減少火警發生。

下列配件，可用洗碗碟機清洗：

轉盤托架



玻璃轉盤



膠蓋



脆焗盤手柄



燒烤架



蒸鍋



請小心清潔：


脆焗盤必須用溫和的清潔劑清洗。要去除頑固污漬，可用百潔海綿和溫和的去垢劑清洗。



清洗前必須讓脆焗盤冷卻。

當脆焗盤仍熱時，請勿用水將它浸泡或清洗。將脆焗盤快速冷卻或會令它損毀。

切勿使用鋼絲刷，它會刮花表面。

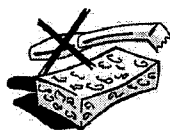

⚠ 重要！

請定期檢查爐門密封件及其附近的位置，確保它們沒有損壞。如果已出現損壞，切勿使用本微波爐，直至有認可的維修人員修理妥當為止。

切勿使用腐蝕性的清潔劑、金屬墊刷、砂布清洗微波爐，否則可能會使控制板、爐具內外四壁受損，只須用海綿沾上性質溫和的洗潔精，或者在廚房用紙巾上噴上玻璃清潔劑，便可清洗微波爐。

切勿將玻璃清潔劑，直接噴在微波爐上。

問題解決指南

如果微波爐不能操作，請檢查下列各項後才致電維修中心：

- * 轉盤和轉盤托架是否固定就位
- * 插頭是否完全插入插座
- * 爐門是否完全關閉
- * 檢查保險絲，並確定已接上電源
- * 等待十分鐘後再嘗試操作
- * 再作嘗試前，請開啟爐門，然後將其關上

以上檢查，可避免不必要的檢查維修，維修服務可能會收費。

致電維修服務中心時，請讀出機身編號和微波爐型號（請參閱維修服務的標籤）。有關詳細資料，請參閱保用証。

注意：

如須更換電源線，必須使用原廠產品，並由原廠的維修技師負責更換。有關的電源線可聯絡我們的維修中心。

⚠ 警告！

維修工作應交由專業的技師執行，若由非合資格的人員進行維修並涉及拆除防止微波外洩的保護蓋子，均屬非常危險。

切勿拆除任何蓋子。



加熱數據測試


符合 IEC 705 進行熱力測試的數據。

國際電器技術委員會 SC.59 H 為測試不同型號微波爐的熱量功能，製訂一套標準。本微波爐應以下列數據為標準。

試驗	重量	大約時間	火力度數	容器
12.3.1	1000克	12分鐘	750瓦	Pyrex 3.227
12.3.2	475克	5分鐘	750瓦	Pyrex 3.827
12.3.3	900克	14分鐘	750瓦	Pyrex 3.838
12.3.4	1100克	20分鐘	燒烤 + 650瓦	Pyrex 3.827
12.3.6	1200克	23分鐘	脆焗	放在脆焗盤上
13.3.0	500克	極速解凍		放在轉盤上

4619-652-62221

Instructions for use

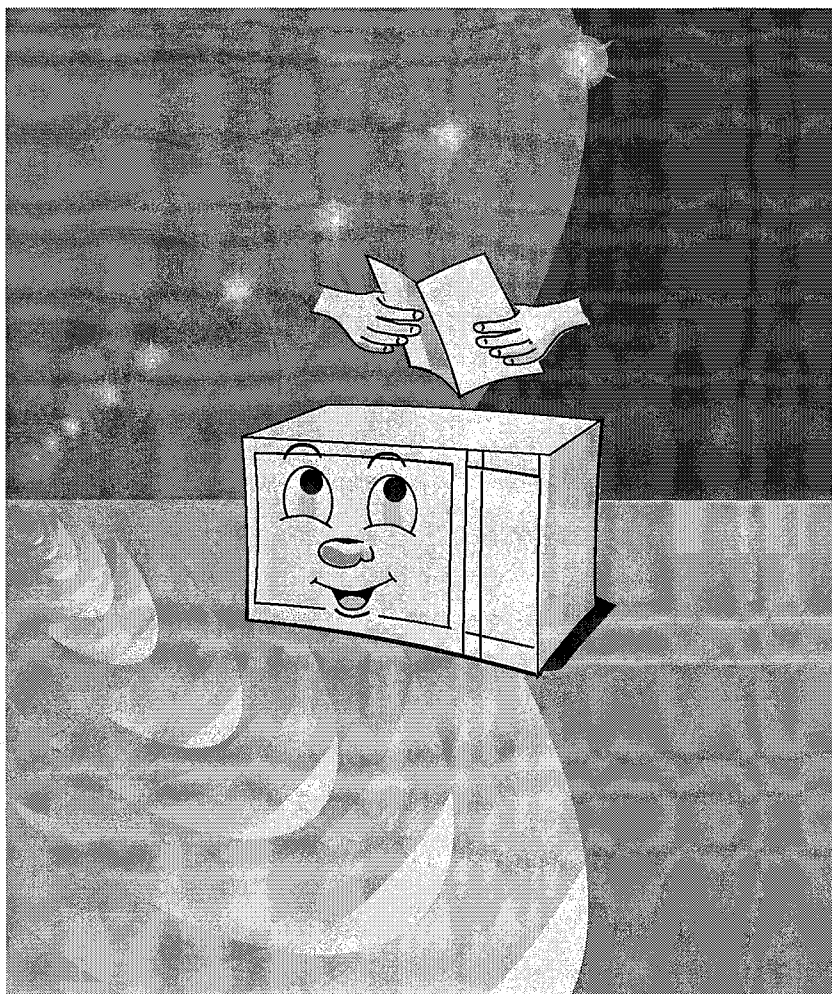

 **Whirlpool**

CONTENT

GB


PAGE

A NOTE TO YOU	3
ENVIRONMENTAL HINTS	3
OVEN OVERVIEW	3
INSTALLATION	4
SAFETY PRECAUTIONS	5
ACCESSORIES	7
START PROTECTION / CHILD LOCK	8
HOW TO PAUSE OR STOP COOKING	8
HOW TO USE THE TIMER & OPTIONAL CLOCK DISPLAY	9
HOW TO COOK & REHEAT WITH MICROWAVES	10
HOW TO USE THE JET DEFROST	11
HOW TO USE THE GRILL	13
HOW TO USE THE GRILL & MICROWAVES	14
HOW TO USE THE CRISP	15
6 TH SENSE FUNCTIONS	16
HOW TO USE THE PERSONAL PREFERENCE	16
HOW TO USE THE 6 TH SENSE REHEAT	17
HOW TO USE THE 6 TH SENSE BEVERAGE	18
HOW TO USE THE 6 TH SENSE CRISP	19
HOW TO USE THE 6 TH SENSE STEAM	20
MAINTENANCE & CLEANING	21
TROUBLE SHOOTING GUIDE	22
DATA FOR TEST HEATING PERFORMANCE	22

A NOTE TO YOU

Thank you for buying this appliance!

This appliance has everything you would expect of a superior appliance, plus the distinct style and thoughtful details, which contribute to the overall look of your home and your enjoyment of it.

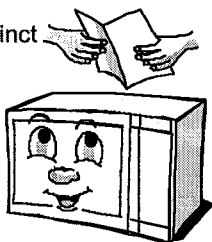

To ensure that you enjoy many years of trouble-free operation, we developed this set of instructions. They contain valuable information concerning how to operate and maintain your new appliance properly and safely.

Please keep this Instruction For Use and your Quick Reference Guide in a safe place for future reference.

ENVIRONMENTAL HINTS

Packing


The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.



Appliance

The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal regulations. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

OVEN OVERVIEW

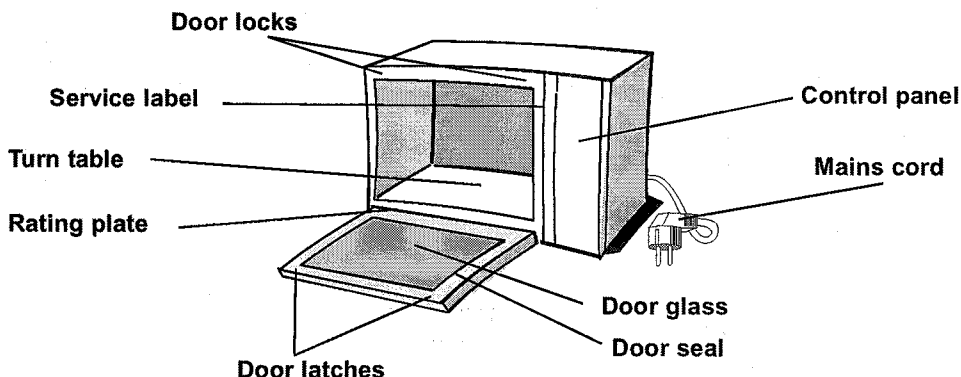

INSTALLATION


PRIOR TO CONNECTING

Check that the voltage on the rating plate corresponds to the voltage in your home.

Place the oven on a stable, even surface that is

strong enough to hold the oven and the food utensils you

put in it. The control side of the unit is the heavy side. Use care when handling.

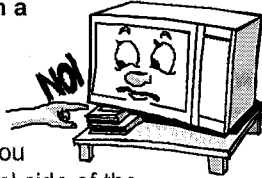

Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 15-cm above the oven. Ensure the microwave oven feet are in place and ensure the space underneath the oven is empty to allow for proper airflow. The oven can't operate in an ambient temperature ranging from +5°C to +35°C.

Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.


Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

AFTER CONNECTING

When the appliance is first plugged in or after a power failure, the display is blank. If required, the oven can display a 24-hour digital Clock. When the Clock function is not programmed the display will remain blank until the cooking time or the Timer is set.

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

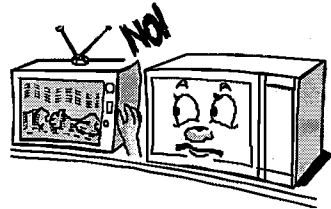

The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

⚠ WARNING!

**THIS APPLIANCE MUST
BE EARTHED!**



SAFETY PRECAUTIONS

GENERAL

This appliance is designed for domestic use only!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for any storage purposes.

Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

Do not over-cook food. Fire could result.

If material inside / outside the oven should ignite, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

Never lean on the door when the door is open. Injury could result.



WARNING!

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.



If the Grill function is not used regularly, there is a risk of fire, due to the possible buildup of foodparticles and fat, beneath the grillelement. To reduce this risk, the Grill only function should be run for 10 minutes once a month to clean the elements.

SAFETY PRECAUTIONS

LIQUIDS

E.g. beverages or water

in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.

To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.



DEEP-FRYING

Do not use your microwave oven

for deep-frying, because the oil temperature cannot be controlled.



CAREFUL

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the



temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided. Ensure the Lid and the Teat is removed before heating!

CONTAINERS

Do not use your


microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



EGGS

Do not use your

microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

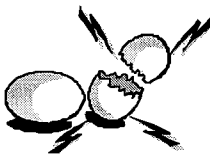

HANDS OFF

Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

ACCESSORIES

TURNTABLE SUPPORT

Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

- Fit the turntable support in the oven.



GLASS TURNTABLE

Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.


- Place the Glass turntable on the turntable support.



CRISP HANDLE

Use the supplied special

Crisp handle to remove the hot Crisp plate from the oven.

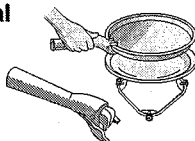

CRISP-PLATE

Place the food directly on the Crisp-plate. Always use the Glass turntable as support when using the Crisp-plate.

 
Do not place any utensils on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

The Crisp-plate may be preheated before use (max. 3 min). Always use the Crisp function when preheating the crisp-plate.



WIRE RACK

Use the Wire rack to put food on when using the Grill function. This will quickly give a pleasant brown surface to the food.




COVER

The Cover is used to cover food during cooking and reheating with microwaves only and helps to reduce spattering, retain food moisture as well as reducing the time needed.

Use the cover for two level reheating

 Do not use together with the Grill, or Crisp. It's made of plastic and will melt.



STEAMER

Use the steamer with the steamgrid in place for such foods as fish, vegetables and potatoes.

Use the steamer without the steamgrid in place for such foods as rice, pasta and white beans.

Always place the steamer on the Glass Turn-table.

Do not use together with the Grill, or Crisp. It's made of plastic and will melt.



GENERAL

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

Use oven mitts when removing the hot utensil.


START PROTECTION / CHILD LOCK

This automatic safety function is **activated one minute after** the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour Clock is displayed, or if the Clock has not been set, when the display is blank).

The door must be opened and closed e.g. putting food into it, before the safety lock is released.

If you attempt to operate the oven without putting food into it, the display will show "door".

HOW TO PAUSE OR STOP COOKING

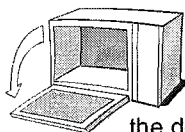

To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes while the door is open.



To continue cooking:

Close the door and press the Start button ONCE. The cooking is resumed from where it was paused.

Pressing the Start button TWICE will increase the time by 30 seconds unless your using an auto function.



If you don't want to continue cooking:

Remove the food, close the door and press the STOP button.


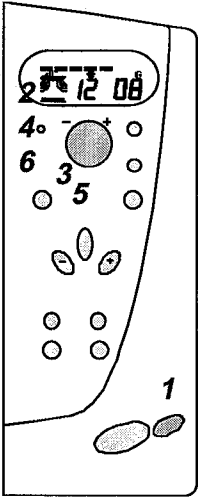








A beep will signal once a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.

Note: The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.

HOW TO USE THE TIMER & OPTIONAL CLOCK DISPLAY

    Keep the door open while setting the Clock. This gives you 10 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.

	USER ACTION	OVEN REACTION
	1. Press the Stop button.	 <ul style="list-style-type: none"> * The two dots are lit.
	2. Press the Clock button for 3 seconds.	 <ul style="list-style-type: none"> * The left-hand digit (hours) flicker. * A beep confirms that you are in setting mode.
	3. Turn the Adjust knob to set the hours.	 <ul style="list-style-type: none"> * The set hours will continue to flicker.
	4. Press the Clock button again.	 <ul style="list-style-type: none"> * The two right hand digits (minutes) flicker.
	5. Turn the Adjust knob to set the minutes.	 <ul style="list-style-type: none"> * The set minutes will continue to flicker.
	6. Press the Clock button again.	 <ul style="list-style-type: none"> * The Clock is set and in operation.

If you wish to remove the Clock from the display once it has been set, simply press the Clock button again for 3 seconds and then press the Stop button.

To reinstate the Clock, follow the above procedure.

TIMER

The Timer is completely independent of all other functions and can be used at any time regardless of whether the oven is currently cooking or not.

 1. Press the Clock button once.

 2. Turn the Adjust knob.

 3. Press the START button.

One press on the Clock button displays how much time is left on the Timer. It's displayed for 3 seconds and then returns to displaying the cooking time (if you are currently cooking).

To stop the Timer when it is operating in the background of another function, you must first recall the Timer to the foreground by pressing the Clock button and then turn the Adjust knob to zero or press the Stop button once.


HOW TO COOK & REHEAT WITH MICROWAVES

Use this function for normal cooking and reheating, or quick reheating (Jet Start) of items such as clear soups, coffee, tea or other foods with high water content.




USER ACTION

OVEN REACTION

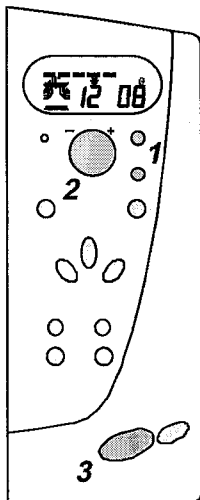


 1. Press the Power button to set the power.




- * The power level is displayed.

 2. Turn the Adjust knob to set the time.




- * The time is displayed.

 3. Press the Start button.



- * The Microwave working symbol flashes.
- * The cooking time is displayed counting down

 Do not use with this function.




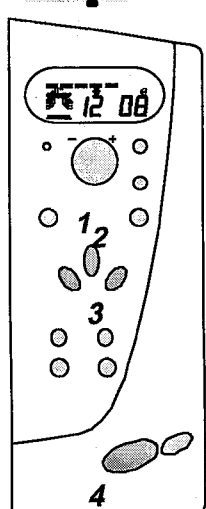
 
 

 
 


Once the cooking process has been started:

The time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Adjust knob to increase or decrease the time.

Pressing the power button may also change the power level. The first press will show you the current powerlevel. Press the power button repeatedly to change power level.

HOW TO USE THE JET DEFROST

Use this function for defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen foods belonging to the 5 categories listed below.

Jet 	USER ACTION	OVEN REACTION
	1. Press the Jet Defrost button.	 <ul style="list-style-type: none"> * The display now shows weight in grams (gr.) and the first of the five food classes is indicated.
	2. Continue to press the Jet Defrost button to select food class.	 <ul style="list-style-type: none"> * The selected food class is indicated.
	3. Press the Weight buttons to set the weight.	 <ul style="list-style-type: none"> * The set weight is displayed.
	4. Press the Start button.	 <ul style="list-style-type: none"> * The defrosting process begins. * The Microwave working symbol flashes. * The defrosting time is displayed counting down.
<p>Do not use with this function.</p>   	<p>5. Midway thru the defrosting process the oven stops and prompts you to "TURN FOOD".</p>	<p>Turn Food</p> <p>PRESS Start</p> <ul style="list-style-type: none"> * Don't use the stop button! * Just open the door and turn the food. * Close, and restart with the Jet Start button.

Note: the oven continues automatically after 2 min if the food hasn't been turned. The defrosting time will be longer in this case.

HOW TO USE THE JET DEFROST

The oven needs to know the type of food and the net weight of it.



1 MEAT (100 g - 2 Kg)



2 POULTRY (100 g - 3 Kg)



3 FISH (100 g - 2 Kg)



4 VEGETABLES (100 g - 2 Kg)




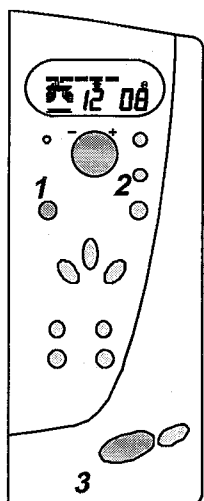
 
 
 
5 BREAD (100 g - 2 Kg)

If the weight is lesser or greater than recommended weight:

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting. When softening ice cream or butter you should adjust the setting to 90 W.

HOW TO USE THE GRILL

Use this function to quickly give a pleasant brown surface to the food.

	USER ACTION		OVEN REACTION
	1. Press the Grill button.		<ul style="list-style-type: none"> * 5 sec is displayed. * The Grill symbol is lit.
	2. Turn the Adjust knob to set the time.		<ul style="list-style-type: none"> * The set time is displayed.
	3. Press the Start button.		<ul style="list-style-type: none"> * The Grill symbol flashes. * The cooking time is displayed counting down.

Do not use with this function.



Do not leave the oven door open for long periods when the Grill is in operation, as this will cause a drop in temperature.

Note:

Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.



IMPORTANT!

Ensure that the utensils used are heat resistant and ovenproof before grilling with them.

Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.


HOW TO USE THE GRILL & MICROWAVES

Use this function to cook such foods as Gratin's, Lasagne, Poultry and Baked potatoes.




USER ACTION

OVEN REACTION

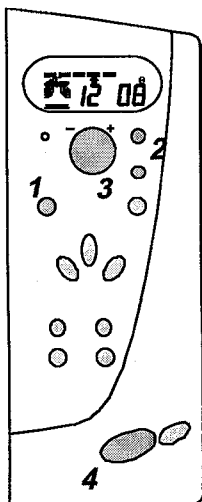


 1. Press the Grill button.




- * 5 sec is displayed.
- * The Grill symbol is lit.

 2. Press the Power button to set the microwave power.




- * The Microwave symbol is lit.
- * The set power level is displayed.

 3. Turn the Adjust knob to set the time.



- * The time is displayed.

 4. Press the Start button.



- * The Microwave symbol flashes.
- * The Grill symbol is flickering.
- * The cooking time is displayed counting down.

Do not use with this function.


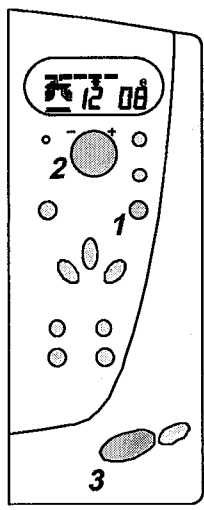
 
 
 


During operation you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited to a factory-preset level.


It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode.

HOW TO USE THE CRISP

Use this function to reheat and cook pizzas and other dough based foods. It is also good for frying bacon and eggs, sausages, hamburgers etc.

	USER ACTION		OVEN REACTION
	1. Press the Crisp button.		<ul style="list-style-type: none"> * 5 sec is displayed. * The Grill symbol is lit. * The Crisp symbol is lit. * The Microwave symbol is lit.
	2. Turn the Adjust knob to set the time.		<ul style="list-style-type: none"> * The set time is displayed.
	3. Press the Start button.		<ul style="list-style-type: none"> * The Microwave symbol flashes. * The Grill symbol flashes. * The cooking time is displayed counting down.

 Do not use with this function.



The oven automatically works with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

It is not possible to change or switch, the Power level or Grill, on/off, when using the Crisp function.

IMPORTANT!

 
Ensure that the Crisp-plate is correctly placed in the middle of the Glass turntable.

The oven and the crisp-plate become very hot when using this function.

Do not place the hot crisp-plate on any surface susceptible to heat.

Be careful, not to touch the ceiling beneath the Grill element.

Use oven mittens or the special Crisp handle supplied when removing the hot Crisp-plate.



HOW TO USE THE 6th SENSE FUNCTIONS

The 6th sense functions works by first checking the start conditions of the food and then continuously monitoring and adjusting the process to achieve the best result.

At the beginning SENSE is displayed until the oven has calculated the Max. time needed and displays it counting down.

The Max. time being displayed varies depending on the type and amount of food. The Max. time is being counted down during the 6th sense program. During count down, the time can jump down several minutes. This is normal. The oven is simply correcting the necessary time.

All foods contain water which gives off humidity when it's being defrosted or reheated.

To enable the 6th sense Reheat function to work properly, the food **should be covered** with the plastic cover supplied.




If you buy frozen foods you should cut 2-3 scores in the packaging before using the 6th sense functions, else the packaging shall be removed and the supplied cover be used.

Please note that a few minutes standing time always improves the result.

HOW TO USE THE PERSONAL PREFERENCE

When using the 6th sense functions (except the Steam function), you also have the possibility to personally control the end result through the Personal Preference feature. This feature enables you to set higher or lower end temperature.

By pressing one of the 6th sense buttons you choose the standard setting. This setting normally gives you the best result. Perhaps the food you reheated became too warm to eat at once. You can easily adjust this before you use that function the next time.


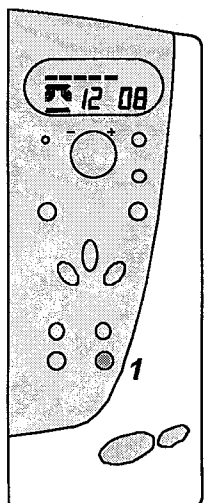

 
+ 2 - 2	USER ACTION	OVEN REACTION
	1. Press one of the 6 th sense buttons.	 <p>* The selected function (SENSE) is displayed.</p>
	2. Turn the Adjust knob to set your Personal Preference.	 <p>* + increases the end temperature.</p>
		 <p>* - decreases the end temperature.</p>

Note:

The Personal Preference can only be set or altered during the first 20 seconds of operation

HOW TO USE THE 6th SENSE REHEAT

Use this function for reheating, chilled or frozen, ready made foods.

	USER ACTION	OVEN REACTION
	1. Press the 6 th sense Reheat button.	<div data-bbox="556 263 720 343"></div> <ul style="list-style-type: none"> * SENSE is displayed. * The Microwave symbol flashes.
		<div data-bbox="556 406 720 486"></div> <ul style="list-style-type: none"> * The Reheat symbol is lit. * After some time the reheat time is displayed, counting down.

Do not use with this function.



This function can be used "as it is" fully automatic or it can be adjusted + 2
to your personal taste through the -- 2
use of the Personal Preference
function.

The program should not be interrupted as long as "SENSE" is displayed.

The Program can be interrupted when the time is displayed.

Always use the supplied cover with this function except when reheating soups in which case the cover is not needed! If the food is packaged in such way that it isn't possible to use the cover, the package should be cut with 2-3 score to allow for excess pressure to escape during reheating.



The net weight shall be kept within 200 - 600 g when using this function. If not you should consider using the manual function to obtain the best result.

Ensure the oven is at room temperature before using this function in order to obtain the best result.

HOW TO USE THE 6th SENSE BEVERAGE


Use this function for reheating beverages such as water, coffee, tea or milk.

Beverages are heated in 1 or 2 separate cups.




USER ACTION

OVEN REACTION

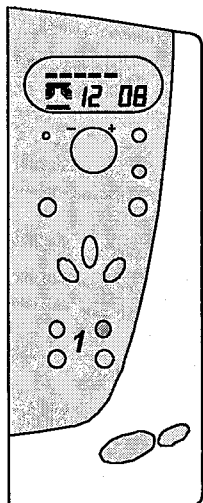


 1. Press the 6th sense Beverage button.



- * SENSE is displayed.
- * The Microwave symbol flashes.
- * The Reheat symbol is lit.

 Do not use with this function.



This function can be used "as it is", fully automatic, or it can be adjusted to your personal taste through the use of the Personal Preference function. **+ 2**
- 2

The net weight shall be kept within **150 - 400 g** when using this function. If not you should consider using the Time and Power function to obtain the best result.

The program should not be interrupted during operation.



IMPORTANT!


Always use the Personal Preference minus functions when reheating milk or chocolate

Don't heat beverages which contain alcohol.

HOW TO USE THE 6th SENSE CRISP

Use this function for convenience foods. It's ideal for french fries and pizza's. This function enables you to quickly reheat your food to serving temperature.


	USER ACTION	OVEN REACTION
--	-------------	---------------

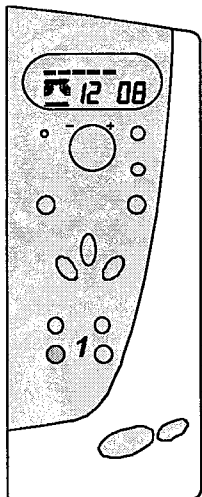

1. Press the 6th sense Crisp button.



 
- * SENSE is displayed.
- * The Microwave symbol flashes.



- * The Grill symbol flashes.
- * After some time the reheat time is displayed, counting down.

At the end of the cooking process, the oven suggests a "continue cooking" time. Check the food. (Frenchfries could be turned) and then (if needed) press the start button to continue cooking on the suggested time.

 Do not use with this function.



This function can be used "as it is", fully automatic, or it can be adjusted + 2 -- 2 to your personal taste through the use of the Personal Preference function.

The program should not be interrupted as long as "SENSE" is displayed.

The Program can be interrupted when the time is displayed.

Only use the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.

If the weight is less than recommended weight:

Use the manual "Crisp function" to crisp the food manually. Experience will give you the correct time for your favourite small amount foods.

If the weight is greater than recommended weight:

Divide the food into two or more pieces and proceed to Crisp each piece separately. If it's not possible to divide the food, you must use the manual "Crisp function" to crisp the food manually. With greater amounts it is necessary to stir or turn the food during Crisping and this is best done with the manual "Crisp function".



(250 - 600 g)

* French fries



(250 - 600 g)

* Pizza's


⚠ IMPORTANT!

Do not place any containers or wrappings on the Crisp plate!

Only the food is to be placed on the Crisp plate.

HOW TO USE THE 6th SENSE STEAM


Use this function for quick boil up and then simmer your food. All in one step from raw ingredients to finish.

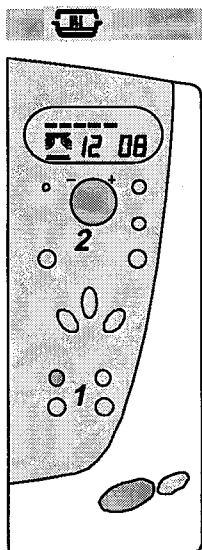


USER ACTION

1. Press the 6th sense Steam button.
2. Turn the Adjust knob until the required simmering time is indicated.
3. Press the Start button.

 
OVEN REACTION



 - * The Microwave symbol is lit.
- * The Reheat symbol is lit.
- * BOIL is displayed.



 - * The time is displayed for 3 seconds then BOIL is displayed again.



- * When the boiling temperature is reached the simmering time is displayed counting down.

Do not use with this function.



Your microwave oven has an automatic boil and steam cooking function.

Suitable foods are for instance: Potatoes or rice.

It works in 2 steps.

- * The first step quickly brings the food to boiling temperature.
- * The second step automatically adjusts to simmering temperature in order to avoid over boiling.

Always cover the food with a lid. Ensure that the vessel and lid are microwave and oven proof before using them. If you don't have a lid available to your chosen vessel, you may use a plate instead. It should be placed with the underside facing the inside of the vessel.

Do not use plastic or aluminium wrappings when covering the food.

Vessels used should not be more than half filled. If you intend to boil large amounts, you should choose a larger vessel in order to ensure that it's not filled to more than half of its size.

WARNING!

The Steamer is designed to be used with microwaves only!
Never use it with any other function at all.

Using the steamer in any other function may cause damage.

Always ensure that the turntable is able to turn freely before starting the oven.

Always place the steamer on the Glass Turn-table.

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.



At regular intervals, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odours inside the oven.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge. If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:

Turntable support.



Glass turntable.



 
Cover.



Crisp handle.



Wire rack.



Steamer.



CAREFUL CLEANING:


The Crisp-plate should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.



Always let the crisp-plate cool off before cleaning.

Do not immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

Do not use steel-wool pads. This will scratch the surface.

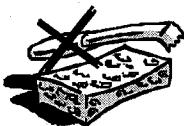

WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

Abrasive cleansers, steel-wool pads, gritty wash cloths, etc. can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven.

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

- * The Turntable and turntable support is in place.
- * The Plug is properly inserted in the wall socket.
- * The Door is properly closed.
- * Check your Fuses and ensure that there is power available.
- * Wait for ten minutes and then try to operate the oven once more.
- * Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

Important:

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organisation. The mains cord may only be replaced by a trained service technician.

WARNING!

Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

Do not remove any cover.



DATA FOR TEST OF HEATING PERFORMANCE

In accordance with IEC 705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	1000 g	12 min	750 W	Pyrex 3.227
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	14 min	750 W	Pyrex 3.838
12.3.4	1100 g	20 min	Grill + 650 W	Pyrex 3.827
12.3.6	1200 g	23 min	Crisp	Place on crisp plate
13.3.0	500 g	Jet defrost		Place on turntable



4619-652-61981



4619 694 37841

